

# User Manual

**Catalog Number:** EKC39572

**Product Name:** Rat prealbumin (PA) ELISA Kit

**Detection Range:** 375 ng/ml-6000 ng/ml

**Intended Use:** For quantitative determination of rat prealbumin (PA) concentrations in serum, plasma, tissue homogenates, cell culture supernates.

**Precautions:** For research use only. Not for use in diagnostic procedures.

**Manual Version:** 202301V1

**Storage:**

Unopened kit	6 months when stored at 2 - 8°C.
Opened Kit	May be stored up to 1 month at 2 - 8°C. Keep it in sealed aluminum foil bag and avoid moisture.

The product manual may be updated as a result of continuous improvements.

Always refer to the hard copy manual included in the kit for your experiment.

## Kit Components

Reagents	Quantity
Assay Plate (12 x 8 coated Microwells)	1(96 wells)
Standard (Freeze dried)	2
HRP-conjugate (100 x concentrate)	1 x 60 $\mu$ l
HRP-conjugate Diluent	1 x 10 ml
Sample Diluent	2 x 20 ml
Wash Buffer (25 x concentrate)	1 x 20 ml
TMB Substrate	1 x 10 ml
Stop Solution	1 x 10 ml
Adhesive Strip (For 96 wells)	4
Instruction Manual	1

## Working Principle

This assay employs the competitive inhibition enzyme immunoassay technique. The microtiter plate provided in this kit has been pre-coated with PA. Standards or samples are added to the appropriate microtiter plate wells with Horseradish Peroxidase (HRP) conjugated antibody preparation specific for PA. The competitive inhibition reaction is launched between with pre-coated PA and PA in samples. A substrate solution is added to the wells and the color develops in opposite to the amount of PA in the samples. At last, measure the intensity of color after stopping color development.

## **Sensitivity**

The minimum detectable dose of rat PA is less than 375 ng/ml. The sensitivity of this assay, or Lower Limit of Detection (LLD) was defined as the lowest rat PA concentration that could be differentiated from zero. It was determined the mean O.D value of 20 replicates of the zero standard added by their three standard deviations.

## **Specificity**

This assay has high sensitivity and excellent specificity. No significant cross-reactivity or interference between rat PA and analogues was observed. Limited by current skills and knowledge, it is impossible for us to complete the cross-reactivity detection between rat PA and all the analogues, therefore, cross reaction may still exist.

## **Precision**

### **Intra-assay Precision (Precision within an assay): CV%<8%**

Three samples of known concentration were tested twenty times on one plate to assess.

**Inter-assay Precision (Precision between assays): CV%<10%**

Three samples of known concentration were tested in twenty assays to assess.

**Other Supplies Required**

- Microplate reader capable of measuring absorbance at 450 nm, with the correction wavelength set at 600 nm or 630 nm.
- An incubator which can provide stable incubation conditions up to  $37^{\circ}\text{C}\pm 0.5^{\circ}\text{C}$ .
- Squirt bottle, manifold dispenser, or automated microplate washer.
- Absorbent paper for blotting the microtiter plate.
- 100ml and 500ml graduated cylinders.
- Deionized or distilled water.
- Pipettes and pipette tips.
- Test tubes for dilution.

## Sample Collection & Storage

- **Serum** Use a serum separator tube (SST) and allow samples to clot for two hours at room temperature or overnight at 4°C before centrifugation for 15 minutes at 1000 ×g. Remove serum and assay immediately or aliquot and store samples at -20°C or -80°C. Avoid repeated freeze-thaw cycles.
- **Plasma** Collect plasma using EDTA, or heparin as an anticoagulant. Centrifuge for 15 minutes at 1000 ×g at 2-8°C within 30 minutes of collection. Assay immediately or aliquot and store samples at -20°C or -80°C. Avoid repeated freeze-thaw cycles.
- **Tissue Homogenates** 100mg tissue was rinsed with 1XPBS, homogenized in 1 ml of 1X PBS and stored overnight at -20°C. After two freeze-thaw cycles were performed to break the cell membranes, the homogenates were centrifuged for 5 minutes at 5000 x g, 2 - 8°C. The supernate was removed and assayed immediately. Alternatively, aliquot and store samples at -20°C or -80°C. Centrifuge the sample again after thawing before the assay. Avoid repeated freeze-thaw cycles.
- **Cell Culture Supernates** Remove particulates by centrifugation for 15 minutes at 1000 x g, 2 - 8°C and assay immediately or aliquot and store samples at -20°C or -80°C. Avoid repeated freeze-thaw cycles.

## Sample Preparation

Serum and plasma samples require a 1000-fold dilution into Sample Diluent. The suggested 1000-fold dilution can be achieved by adding 5 $\mu$ l sample to 95 $\mu$ l of Sample Diluent first, then complete the 1000-fold dilution by adding 5 $\mu$ l of this solution to 245 $\mu$ l of Sample Diluent. The recommended dilution factor is for reference only. The optimal dilution factor should be determined by users according to their particular experiments.

## Notes:

1. Biomatik is only responsible for the kit itself, not for the samples consumed during the assay. The user need to calculate the possible amount of the samples to be used in the whole test. Please reserve sufficient samples in advance.
2. Samples to be used within 5 days may be stored at 2-8°C, otherwise, samples must be stored at -20°C ( $\leq$ 1month) or -80°C ( $\leq$ 2month) to avoid contamination and loss of bioactivity.
3. Grossly hemolyzed samples are not suitable to use.
4. It would be necessary to run a preliminary experiment for validation, if the samples are not indicated in the manual.

5. Please predict the concentration before assaying. If results were not within the range of the standard curve, users would need to estimate the optimal sample dilutions for their particular experiments.
6. Tissue or cell extraction samples prepared by chemical lysis buffer may cause unexpected ELISA results due to the impacts of certain chemicals.
7. Considering the possibility of mismatch between antigen from other resources and antibody in our kits (e.g., antibody targets conformational epitope rather than linear epitope), some native or recombinant proteins from other manufacturers may not be recognized by our products.
8. Due to factors including cell viability, cell number and sampling time, samples from cell culture supernatant may not be detected by the kit.
9. Recommend to use fresh samples for the test. If you store samples for long time, protein degradation and denaturalization may occur in those samples and finally lead to wrong results.

## Reagents Preparation

- **Kindly use graduated containers to prepare the reagent.**
- Bring all reagents to room temperature (18-25°C) before use for 30 mins.
- Prepare fresh standard for each assay. Use within 4 hours and discard after use.
- Making serial dilution in the wells directly is not permitted.
- Please carefully reconstitute Standards according to the instruction, and avoid foaming and mix gently until the crystals have completely dissolved. To minimize imprecision caused by pipetting, use small volumes and ensure that pipettors are calibrated. It is recommended to suck more than 10µl for once pipetting.
- Distilled water is recommended to be used to make the preparation for reagents or samples. Contaminated water or container for reagent preparation will influence the detection result.

**HRP-conjugate (1x)** - Centrifuge the vial before opening.

**HRP-conjugate** requires a 100-fold dilution. A suggested 100-fold dilution is 10 µl of **HRP-conjugate** + 990 µl of **HRP-conjugate Diluent**.




**Wash Buffer (1x)**- If crystals have formed in the concentrate, warm them up to room temperature and mix them gently until they get completely dissolved. Dilute 20 ml of Wash Buffer Concentrate (25 x) into deionized or distilled water to prepare 500 ml of Wash Buffer (1 x).

### Standard

Centrifuge the standard vial at 6000-10000rpm for 30s.

Reconstitute the **Standard** with 1.0 ml of **Sample Diluent**. Do not substitute other diluents. This reconstitution produces a stock solution of 6000 ng/ml. Mix the standard to ensure complete reconstitution and allow the standard to sit for a minimum of 15 mins with gentle agitation prior to making dilutions.

Pipette 150  $\mu$ l **Sample Diluent** into each tube (S0-S4). Use the stock solution to produce a 2-fold dilution series (below). Mix each tube thoroughly before the next transfer. The undiluted Standard serves as the high standard (6000 ng/ml). Sample Diluent serves as the zero standard (0 ng/ml).

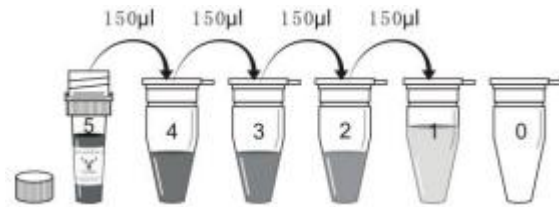

Tube	S5	S4	S3	S2	S1	S0
ng/ml	6000	3000	1500	750	375	0

### Key Notes

- Do not mix or substitute reagents with those from other lots or sources.
- If samples generate higher values than the highest standard, dilute the samples with Sample Diluent and repeat the assay.
- Any variation in Sample Diluent, operator, pipetting technique, washing technique, incubation time or temperature, and kit age can cause variation in binding.
- This assay is designed to eliminate interference by soluble receptors, binding proteins, and other factors present in biological samples. Until all factors have been tested in the Immunoassay, the possibility of interference cannot be excluded.

### Precautions

The Stop Solution provided with this kit is an acid solution. Wear eye, hand, face, and clothing protection when using this material.

## Assay Procedures

**Bring all reagents and samples to room temperature before use.**

**Centrifuge the sample again after thawing before the assay. It is**

**recommended to assay all samples and standards in duplicate.**

1. Prepare all reagents, working standards, and samples as directed in the previous sections.
2. Determine the number of wells to be used and put remaining wells and the desiccant back into the pouch and seal the ziploc, store unused wells at 4°C.
3. Set a **Blank** well without any solution.
4. Add 50µl **Standard** or **Sample** per well.
5. Add 50µl **HRP-conjugate(1x)** to each well at once (**Not to the Blank well**). Seal plate with adhesive strip. Mix well and then incubate at 37°C for 60 mins. A plate layout is provided to record standards and samples assayed.
6. Aspirate each well and wash, repeat the process four times for a total of five washes. Wash by filling each well with **Wash Buffer** (200µl) using a squirt bottle, multi-channel pipette, manifold dispenser, or autowasher, and let it stand for 2 mins. Complete removal of liquid at each step is essential to good performance. After the last wash, remove any remaining Wash Buffer by aspirating or decanting. Invert the plate and blot it against clean paper towels.

7. Add 90 $\mu$ l **TMBSubstrate** to each well and mix well. Cover the microtiter plate adhesive strip. Incubate at 37°C for 20 mins. **Protect from light.**
8. Add 50 $\mu$ l **Stop Solution** to each well, gently tap the plate to ensure thorough mixing.
9. Determine the optical density of each well within 5 mins, using a microplate reader set to 450 nm. If wavelength correction is available, set to 540 nm or 570 nm. Subtract readings at 540 nm or 570 nm from the readings at 450 nm. This subtraction will correct for optical imperfections in the plate. Readings made directly at 450 nm without correction may be higher and less accurate.

**\*Samples may require dilution. Please refer to Sample Preparation.**

**Notes:**

1. The final experimental results will be closely related to validity of products, operation skills of end users and the experimental environments.
2. Samples or reagents addition: Please use the freshly prepared Standard. Please carefully add samples to wells and mix gently to avoid foaming. Do not touch the well wall as possible. For each step in the procedure, total dispensing time for addition of reagents or samples to

the assay plate should not exceed 10 mins. This will ensure equal elapsed time for each pipetting step, without interruption. Duplication of all standards and specimens, although not required, is recommended. To avoid cross-contamination, change pipette tips between additions of each standard level, between sample additions, and between reagent additions. Also, use separate reservoirs for each reagent.

3. Incubation: To ensure accurate results, proper adhesion of plate sealers during incubation steps is necessary. Do not allow wells to sit uncovered for extended periods between incubation steps. Once reagents have been added to the well strips, DO NOT let the strips DRY at any time during the assay. Incubation time and temperature must be observed.

4. Washing: The wash procedure is critical. Complete removal of liquid at each step is essential to good performance. After the last wash, remove any remaining Wash Solution by aspirating or decanting and remove any drop of water and fingerprint on the bottom of the plate. Insufficient washing will result in poor precision and falsely elevated absorbance reading. When using an automated plate washer, adding a 30 second soak period following the addition of wash buffer, and/or rotating the plate 180 degrees between wash steps may improve assay precision.

5. Controlling of reaction time: Observe the change of color after adding TMB Substrate (e.g. observation once every 10 mins), TMB Substrate should change from colorless or light blue to gradations of blue. If the color is too deep, add Stop Solution in advance to avoid excessively strong reaction which will result in inaccurate absorbance reading.
6. TMB Substrate is easily contaminated. TMB Substrate should remain colorless or light blue until added to the plate. Please protect it from light.
7. Stop Solution should be added to the plate in the same order as the TMB Substrate. The color developed in the wells will turn from blue to yellow upon addition of the Stop Solution. Wells that are green in color indicate that Stop Solution has not mixed thoroughly with TMB Substrate.

### **Calculation of Results**

**Using the professional soft "Curve Expert" to make a standard curve is recommended, which can be downloaded from our web.**

Average the duplicate readings for each standard and sample and subtract the average optical density of Blank.

Create a standard curve by reducing the data using computer software capable of generating a four parameter logistic (4-PL) curve-fit. As an alternative, construct a standard curve by plotting the mean absorbance for each standard on the x-axis against the concentration on the y-axis and draw a best fit curve through the points on the graph. The data may be linearized by plotting the log of the PA concentrations versus the log of the O.D. and the best fit line can be determined by regression analysis. This procedure will produce an adequate but less precise fit of the data.

If samples have been diluted, the concentration read from the standard curve must be multiplied by the dilution factor.